

READ ME FIRST!!

This download contains Sub 37 Editor v1.0.1 (OSX), Sub 37 Editor v1.0.0 (Windows) and Sub 37 firmware v1.2.0.

In order for your Sub 37 to have full compatibility with the editor, you must update it to the latest firmware version. Use the included OSX or Windows Firmware Updater app to update your firmware via USB. This application is located in the Sub 37 Firmware folder.

NOTE: *Make sure to connect USB directly from the Sub 37 to your computer when updating firmware; do not connect it through a USB hub. Also, it is recommended not to run the Firmware Updater on an emulated OS (a virtual machine). For best results, use your computer hardware's native operating system while updating firmware.*

The update process should work automatically, however, firmware Sysex files (Steps 1-4) are also included in case you need to perform a manual firmware update. If the Firmware Updater does not complete successfully, go to the Sub 37 Firmware/Manual Install folder and follow the instructions there (Sub_37_Update_Instructions_v1.2.0.pdf).

Once the latest firmware is installed on your Sub 37, double-click the Sub 37 Editor installer and follow the on-screen prompts.

A FINAL NOTE: *you should cycle the power on the Sub 37 off and then on again, after updating its firmware successfully and before using the Editor. USB MIDI output from the Sub 37 requires a reboot after updating the firmware.*

WINDOWS USERS ONLY

The plugin version of the Sub 37 Editor assumes you will be using your Sub 37 USB connection for both the Editor and your DAW software. This works without any special setup on a Mac, but requires a custom Moog USB MIDI driver for Windows. This is because the default Windows USB MIDI driver only allows one program at a time to use the USB port.

The USB driver installer is included in this package, in the folder 'Sub 37 Editor/Windows. If you are using Windows 8 or Windows 10, install Moog USB MIDI driver v4.35.0. If you are using Windows 7, install Moog USB MIDI driver v2.23.0.

NOTE: *Do not install the Sub 37 USB Driver until after you update your Sub 37 firmware to v1.2.0. The USB driver does not work with older Sub 37 firmware.*

If you already installed the Sub 37 USB Driver and now cannot update your firmware, go to Control Panel and uninstall the Sub 37 USB driver. Update your Sub 37 firmware before re-installing the USB driver.