



SUB PHATTY

EDITOR USER'S MANUAL

SUB PHATTY EDITOR MANUAL



OVERVIEW & FEATURES

The Sub Phatty Plugin and Standalone Editor controls preset library management, preset sharing, real time editing, and host DAW integration. Powerful **HIDDEN** and **SHIFT MODE** features are also easily accessed and controlled from this application.

NOTE: This software is for MIDI control only. It does not make or process sound.

For detailed feature descriptions, please refer to the Sub Phatty Manual:

<http://www.moogmusic.com/products/phattys/sub-phatty#downloads-tab>

SYSTEM REQUIREMENTS:

Mac: OS X 10.7 or higher

PC: Windows 7 or higher with an Intel or AMD processor.

- Available USB Port
- Host Digital Audio Workstation (DAW) Compatible with VST, AU, or AAX plugins
- Your Sub Phatty requires firmware version 2.2 or newer

VST Compatibility: 2.4+ or VST 3+.

Please refer to your DAW's software manufacturer for support.

All specifications subject to change without notice.

SETUP & CONNECTIONS

1) Connect your Sub Phatty synthesizer via USB cable to your computer.

NOTE: Be sure to setup your MIDI I/O settings on your Mac or PC.

For more information about connecting your synthesizer to a computer and audio device please refer to the Sub Phatty User's manual *Page 7-8*.

INSTALLATION:

MAC USERS: Click on the .pkg file, select which versions of the editor you want to install and click the **CONTINUE** button.

WINDOWS USERS: Click on the .Exe file, select which versions of the editor you want to install and click the **CONTINUE** button.

Both the Plugin and Standalone versions will automatically create a support folder upon launching the application. See Preset Manager below for more information.

OSX: /Users/username/Library/Application Support/Moog Music Inc./Sub Phatty/Presets Library


Windows 7: C:\Users\USERNAME\AppData\Roaming\Moog Music Inc\Sub Phatty\Presets Library

Windows XP: C:\Documents and Settings\USERNAME\Application Data\Moog Music Inc

NOTE for Windows users only: To allow Sub Phatty MIDI port sharing within DAWs, install the included Moog Sub Phatty USB Midi Driver v4.35.0

PREFERENCES (PREFS)

Click the **PREFS** button to open the preferences window:

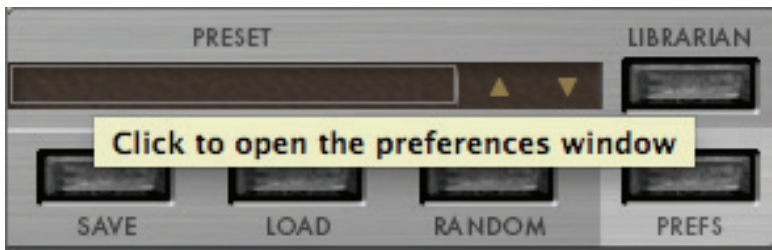

PREFERENCES WINDOW:

Set the MIDI input and MIDI Output in the **EDITOR SETTINGS** section to “Moog Sub Phatty”.

Once the MIDI Input and Output settings are selected, the editor’s **SUB PHATTY GLOBAL SETTINGS** will update with the connected Sub Phatty’s internal global settings.

See pages 17-19 (Editor Manual) for detailed information on the **PREFERENCES** window.

Note: Changes made to the editor’s global settings are saved to the connected Sub Phatty’s internal memory.



Your Sub Phatty’s current firmware version is displayed in the lower left corner of the Preferences window.

STANDALONE OPERATION:

The Standalone Editor is useful for creating sounds on your Sub Phatty, sharing presets with others, or managing your preset library without running a host DAW.

DAW INTEGRATION:

Launch your DAW application. Create an audio, instrument, or aux track and instantiate the Sub Phatty Editor. MIDI IN and OUT must be selected from the PREFS tab in the Sub Phatty plugin. Automation, control change messages, and sysex information for the Sub Phatty can be fully embedded and recalled within a track. This allows for extremely expressive sound design that would be impossible with only two hands.

NOTE: Some DAWs allow the editor and MIDI data to exist on the same track, others require them to be on separate tracks. Please refer to your DAW’s manual for more information.

PRESET MANAGER

The editor's currently active preset is shown in the preset window. To select a preset, click on the window to open a menu of available presets, or use the arrows to scroll through the list. Clicking on the folder icon opens a window to select "**HARDWARE**" (the 16 presets currently stored in the Sub Phatty) or "**LOCAL FOLDER**" (presets stored in a folder on the computer.)



Presets loaded in the preset manager window are sent to the Sub Phatty for previewing and editing, but are not permanently stored in any of the preset locations. Right click on a preset to rename it.

SAVE: Opens the "Save preset as" window allowing you to name and save the current Editor settings as a preset. The default location is the **PRESETS LIBRARY** folder, which is installed on your computer when launching the Plugin or Standalone version for the first time:

OSX: /Users/username/Library/Application Support/Moog Music Inc./Sub Phatty/Presets Library

Windows 7: C:\Users\Administrator\AppData\Roaming\Moog Music Inc\Sub Phatty\Presets Library


Windows XP: C:\Documents and Settings\USERNAME\Application Data\Moog

Note: You can also drag and drop a preset to a folder directly from the Sub Phatty preset window.

LOAD: Opens the **PRESETS LIBRARY** folder. Select the desired preset and click **OPEN** to load the file and send it to the Sub Phatty for previewing.

RANDOM: Creates a new preset from a set of randomly generated parameters. This is a great way to discover new and unpredictable sounds!

LIBRARIAN: Opens the **PRESET LIBRARY** window. At the left is a list of preset folders, the center shows the list of presets and their categories within the selected folder, and at right is the list of presets stored in the connected Sub Phatty. Presets can be dragged and dropped to and from any location in this window.

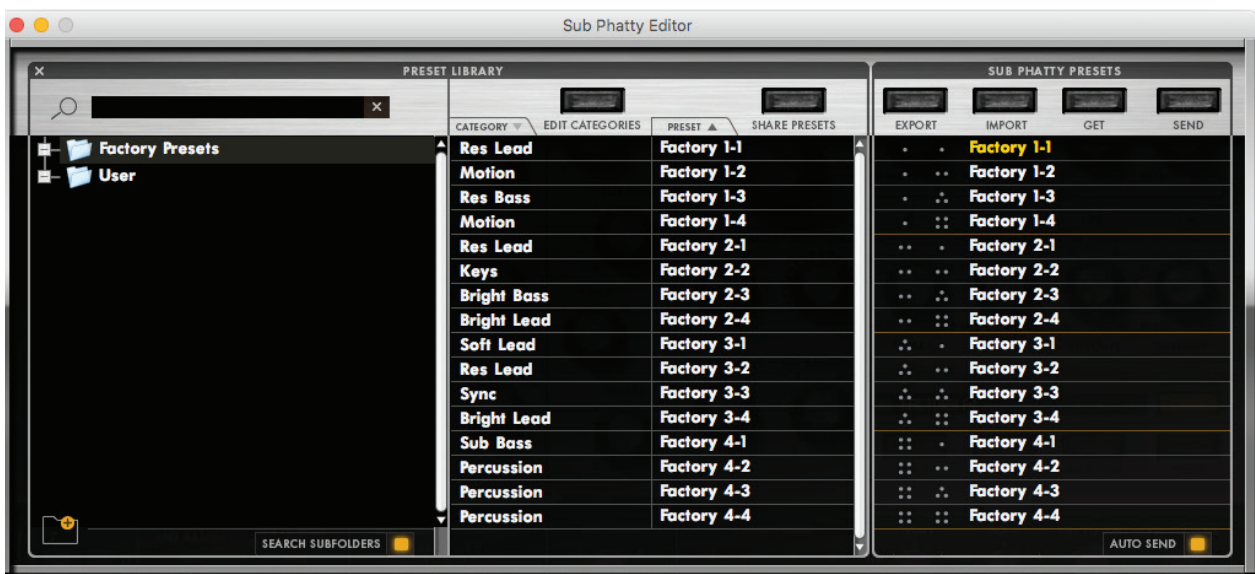

SEARCH FIELD: Use the search field (top left corner) to find an existing preset in a selected folder by name.



SEARCH FOLDERS: The far left column displays the Sub Phatty preset folders. Click on any folder to display all presets within that folder.

SEARCH SUB-FOLDERS: Click the + icon next to any preset folder to view its sub-folders. These are preset folders that live within a root-folder and are ideal for organization and management of presets.


NEW FOLDER: Click on the New Folder icon located at the bottom left corner of the window to create a new preset folder, or right-click on a folder to add a sub-folder.

EDIT CATEGORIES: Category labels make it easier to organize or search for sounds by type. When the Edit Categories button is selected, you can double click or right click on any category to rename it. To assign a preset to a category, click on a preset and select the category from the pull down menu.

(Be sure to exit this tab or you will not be able to view your presets)

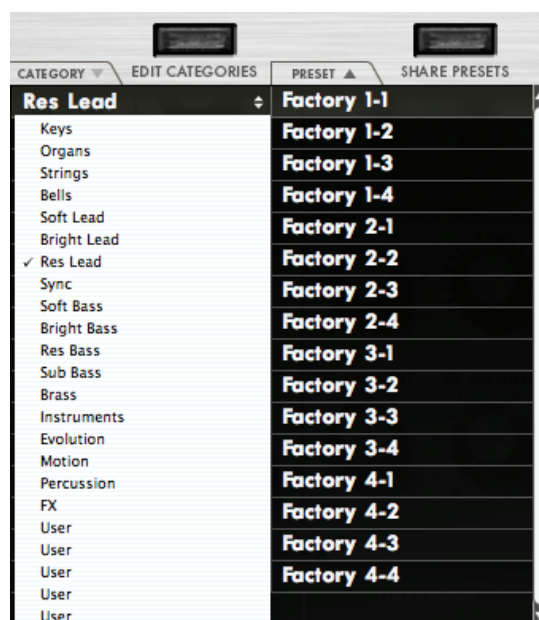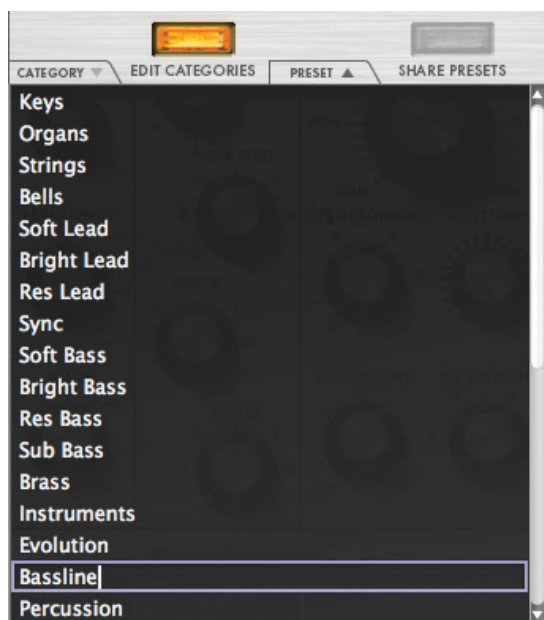

SHARE PRESETS: By selecting one or more presets and then clicking **SHARE PRESETS**, you are able to easily share your synthesized creations with the world via email. For manually sharing individual presets or banks directly to other Sub Phatty owners, right-click on a preset and click **REVEAL** to reveal its location on your computer. The preset or bank sysex (*.syx) file can be copied, emailed directly as an attachment or uploaded to a file sharing site.

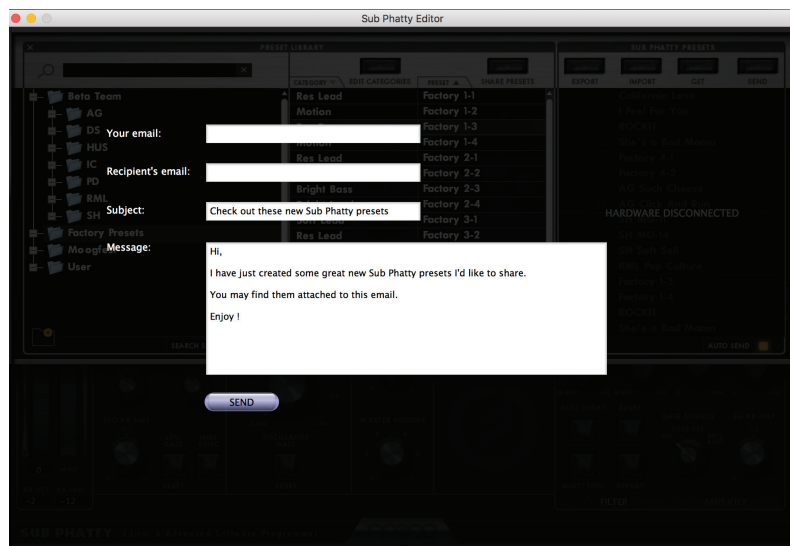

SUB PHATTY PRESETS:

On the right side of the screen is the Sub Phatty Presets window. You can drag and drop presets from the center window to any of the 16 Sub Phatty Preset locations. Double clicking on any preset loads that preset's parameters into the Editor.

EXPORT: Clicking on the export button compiles the Sub Phatty's current internal preset bank as a sysex file (*.syx) and opens a "Save bank as" window. Choose the location where you wish to save the file.

IMPORT: Opens the "Load Bank" window for loading a preset bank to the Sub Phatty Presets window. If

AUTO SEND is ON, the bank will automatically be sent to the Sub Phatty. If **AUTO SEND** is OFF, click the send button to transfer the bank to the Sub Phatty.

GET: Retrieves all current presets stored on your Sub Phatty and places them in the Editor's Sub Phatty Presets buffer. To save the presets, click on the export button.

SEND: Sends all 16 presets in the Sub Phatty Presets window to your connected Sub Phatty.

AUTO SEND: Automatically transfers any presets placed in the Sub Phatty Presets window to the specified preset slot.

See Pages 9-10 of the Sub Phatty manual for more details on presets.



Note: The currently active preset in the editor is shown in yellow. Presets will be displayed in italics until they are sent to the Sub Phatty

SYNTHESIZER FEATURES

For detailed information regarding Sub Phatty features and functions, please refer to the Sub Phatty User's manual. For your convenience, each function's associated manual location has been notated.

SHIFT MODE AND HIDDEN PARAMETERS

Clicking on the arrow at the bottom of the editor provides access to the **HIDDEN** (Pages 26-36) and **SHIFT** Mode (Pages 23-25) features window, which significantly expands the Sub Phatty's sonic capabilities.



NOTE: System command features cannot be controlled by the editor. Pages 36-38

PARAMETER ADJUSTMENTS:

FINE TUNING: To make fine parameter adjustments, press Command OR Control + Click and drag any knob. (Alt + Click on a Windows PC.)

ZERO OUT A PARAMETER: Option + Click any knob and it will return to its zero position.



GLIDE

GLIDE TYPE: When you select LCR (Linear Constant Rate), the glide rate between notes will vary; the larger the interval between pitches, the longer the glide time will be. When you select LCT (Linear Constant Time), the glide time between notes will stay the same regardless of the interval. When you select EXP (Exponential), The glide rate between notes will follow an exponential curve that begins with a fast rate and slows as it approaches the target note. *Page 27*

GLIDE RATE: Specifies how much time it takes to smoothly transition from one pitch to the next when you play the keyboard. *Page 22*

LEGATO GLIDE: When **ON**, glide is engaged only when you press a key while holding a previous key. When **OFF**, glide is active on all notes. *Page 27*

GATED GLIDE: Gated Glide causes the gradual change in pitch between notes to be started and stopped by the keyboard gate. When Gated Glide is **OFF**, the pitch CV will continue gliding to the target pitch at the current Glide Rate, regardless of whether or not the Sub Phatty is playing a note. When Gated Glide is **ON**, the pitch CV only glides while a note is playing, and is held constant in between notes. *Page 27*

WHEELS AND PITCH

PITCH WHEEL AMOUNT: Clicking on the numerical field at the top and bottom of the Pitch Wheel allows you to set the pitch bend range up and down from 0 to 24 semitones. *Page 26*

MOD WHEEL: Specifies the modulation wheel's preset value.

KB OCT: Click on the numerical field to specify the Sub Phatty's keyboard octave position. *Page 22*

KB SEMI: Click on the numerical field to specify the Sub Phatty's keyboard transposition offset in semitones. *Page 26*

NOTE: Wheels and Pitch settings are stored with individual presets.



MODULATION

LFO RATE: Varies the Low Frequency Oscillator's modulation rate. The LFO's frequency range can be selected in the **SHIFT MODE PARAMETERS** shown below. *Page 20*

SOURCE: Selects between 5 LFO waveforms and Filter Envelope as the Sub Phatty's source of modulation. *Page 20*

PITCH AMT: Specifies the maximum amount of modulation sent to the Oscillator's pitch when the Mod Wheel is engaged. *Page 20*

PITCH AMT OSC 2 ONLY: Assigns pitch modulation to Oscillator 2 only. *Page 21*

FILTER AMT: Specifies the maximum amount of modulation sent to the Filter Cutoff when the Mod Wheel is engaged. *Page 21*

WAVE AMT: Specifies the maximum amount of modulation sent to the Oscillator's Waveform when the Mod Wheel is engaged. *Page 21*

MODULATION SHIFT MODE PARAMETERS

LFO RANGE: Selects the frequency range at which the LFO operates. Select between Low (0.01 to 10Hz), Medium (0.1 to 100Hz), or High (1 to 1000Hz) ranges. *Page 28*

WAVE MOD DESTINATION: Determines whether the waveform of Oscillator 1, Oscillator 2, or both are modulated when **WAVE AMT** is engaged. *Page 28*

LFO KB AMT: Specifies how much the LFO rate follows the keyboard pitch, from 0 - 2:1. *Page 29*

LFO GATE RESET: Resets the LFO to its start phase with each new note played. *Page 25*

MIDI SYNC: Synchronizes the LFO rate to a clock division** of the incoming MIDI beat clock. If no clock is present, the LFO runs at the selected rate. Default is on. *Page 29*



** See page 38 for LFO clock divisions.



OSCILLATORS

The Sub Phatty's primary source of sound. They generate four waveforms: triangle, sawtooth, square, and pulse. *Page 13*

OCTAVE: Selects the oscillator's pitch in one-octave increments. *Page 13*

HARD SYNC OSC 2: Forces the restart of Oscillator 2's cycle based on Oscillator 1's start phase. Oscillator 2 is phase locked to harmonically related overtones of Oscillator 1's root pitch. *Page 14*

FREQUENCY: Fine-tunes the pitch of Oscillator 2 up to +/-7 semitones within its selected range. *Page 14*

WAVE: Smoothly varies the oscillator's waveform from triangle to sawtooth to square to narrow pulse wave and everything in between. *Page 13*

OSCILLATORS SHIFT MODE PARAMETERS

OSC 2 BEAT FREQUENCY: This parameter creates a linear constant detuning of Oscillator 2 relative to Oscillator 1, so that Oscillator 2 is always detuned by the same number of cycles per second regardless of its musical pitch. *Page 25*

OSCILLATOR GATE RESET: Forces the Oscillators to simultaneously begin their cycles whenever a new note is played. When **ON**, the result is a consistent and well defined leading edge to sounds. When **OFF**, the oscillators run continuously. *Page 25*



MIXER

The mixer combines audio signals from each of the Sub Phatty's four internal sound sources and the external audio input.

NOTE: Any setting above 6 will overdrive the filter's input. *Page 15*

OSC 1: Controls the level of Oscillator 1. *Page 15*

SUB OSC: Controls the level of the Sub Oscillator. The Sub Phatty's sub oscillator is a fixed square wave tuned exactly one octave below the pitch of Oscillator 1. *Page 15*

OSC 2: Controls the level of Oscillator 2. *Page 15*

NOISE: Controls the level of Pink Noise (an un-pitched sound source with frequencies of equal amplitude in every octave) *Page 15*

MIXER SHIFT MODE PARAMETERS

EXT INPUT: Controls the level of signal sent from Sub Phatty's **EXT IN** jack to the mixer section. *Page 25*

PRESET LEVEL / formerly MASTER VOLUME: Sets the maximum volume level of a preset and is stored per preset.

PRESET LEVEL works in combination with the hardware Master Volume control, which is always active.



FILTER

The Sub Phatty has a classic Moog Ladder filter with four selectable slopes. Lowpass filters pass all frequencies up to a point called the cutoff frequency, and then gradually attenuate frequencies above that point.

CUTOFF: Controls the filter's cutoff frequency from 20Hz to 20 KHz. *Page 16*

RESONANCE: Emphasizes harmonics closest to the cutoff frequency and exaggerates any changes to the cutoff frequency. Above 8, the filter resonance will cause the filter to self oscillate. *Page 16*


MULTIDRIVE: Controls the smooth continuous transition from clean signal to asymmetrical, tube-like warmth to aggressive hard clipping. *Page 16*

EG AMOUNT: Controls how much the filter envelope modulates the filter's cutoff. *Page 16*

KB AMOUNT: Specifies how the filter cutoff tracks the keyboard. With **KB AMOUNT** turned up halfway, the filter cutoff will follow the keyboard's pitch at a 1:1 ratio centered at middle C (MIDI note 60). With **KB AMOUNT** set at maximum, the filter tracks the keyboard at a 2:1 ratio, or two octaves for every octave played. *Page 17*

FILTER SHIFT MODE PARAMETERS

FILTER POLES: Filter poles control how sharply high frequency content passed through the filter is rolled off. With fewer poles, the filter has a buzzy, raw sound. With more poles, the sound is smooth and rounder. You can select between 4 filter slopes. 1-pole has a 6dB-per-octave slope, 2-pole has a 12dB-per-octave slope, 3-pole has an 18dB-per-octave slope, and 4-pole has a 24dB-per-octave slope. By default, the Sub Phatty's Filter Poles are set to 4. This is the classic Moog 24dB-per-octave filter slope. *Page 28*

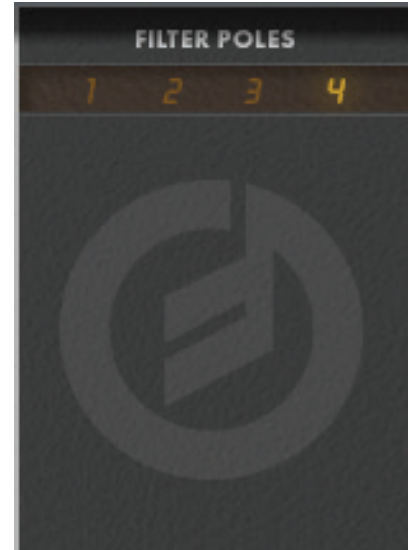

ENVELOPES

Envelopes determine the brightness and volume contour of a sound over time. Each of the Sub Phatty's envelope generators have four stages: attack, decay, sustain, and release (ADSR).

NOTE: The filter envelope can be used as a source in the modulation section.

ATTACK: Specifies the time it takes for the filter or amplifier to ascend to its peak value. *Page 18, 19*

DECAY: Specifies the time it takes for the filter or amplifier to descend to the sustain level. *Page 18, 19*

SUSTAIN: Specifies the filter or amplifier level when a note is held. The sustain stage of an envelope occurs after the attack and decay stages have occurred. *Page 18, 19*

RELEASE: Specifies the time it takes for the filter to descend to the **CUTOFF** knob setting or for the amplifier to descend to zero once a note is release. *Page 18, 19*

ENVELOPE SHIFT MODE PARAMETERS

The **FILTER** and **AMPLIFIER** tabs control additional filter and amplifier envelope parameters. **DELAY** specifies a timed pause before the onset of the attack stage, effectively turning an ADSR envelope into a DADSR envelope. *Page 23, 24*



HOLD: Specifies the amount of time that the envelope holds at the peak level between the attack and decay stages, effectively turning an ADSR envelope into an AHDSR envelope. This can be used to simulate the clipped envelopes of vintage synthesizers such as the Minimoog Model D, giving the peak a short sustain before the decay stage. *Page 23, 24*

VEL TO AMT: Specifies how playing velocity will the Filter or Amplifier Envelope Amount settings. As this control is increased, the sound will become brighter or louder in response to the velocity with which a key is pressed. *Page 23, 24*

VEL TO TIME: Specifies how playing velocity scales the Filter or Amplifier Envelope decay and release times. When engaged, higher playing velocity on the keyboard lengthens the envelope time. *Page 24*

FAST DECAY: Sharpens decay and release slopes without affecting their time.

RESET: When Envelope Reset is turned **ON**, each new note triggers the envelope causing it to reset from Zero. When Envelope Reset is turned **OFF**, the envelope Attack sweeps the envelope output only from its current level to the maximum level. *Page 30, 31*

MULTI TRIG: With multiple triggering turned **ON**, a new gate occurs each time you play a note on the keyboard. You can select single or multiple triggering separately for the Amplifier and Filter envelopes. *Page 29, 31*

REPEAT: When envelope repeat is turned **ON**, the Delay, Attack, Hold, Decay, and Release stages loop continuously as long as a note is held. The shorter the envelope times, the faster the loop will repeat. *Page 30, 32*

GATE SOURCE: Controls whether the envelope is triggered via the keyboard, external gate voltage, both, or is on continuously. Use keyboard trigger for playing from the keyboard or via MIDI, use external gate if you wish to control the synthesizer with modular or other gear, and use on for self-sustaining drones or for processing external signals through the Sub Phatty's external input. *Page 31, 32*

EG KB AMT: Controls how keyboard tracking shortens the envelope time as you play higher notes on the keyboard. This effect is similar to the natural envelopes of acoustic instruments, (e.g. strings or piano), which have shorter note durations as you play higher in pitch. *Page 30*

PREFERENCES

The screenshot shows the Moog Sub Phatty preferences window, divided into two main sections: Editor Settings and Sub Phatty Global Settings. The Editor Settings section includes MIDI Input (Moog Sub Phatty), MIDI Output (Moog Sub Phatty), Knob Behavior (Vertical), Echo MIDI from Host (OFF), and MIDI Port Warning (ON). The Sub Phatty Global Settings section includes MIDI IN Channel (1), MIDI OUT Channel (1), Midi Input (DIN & USB), Midi Output (DIN & USB), Merge DIN Input (Off), Merge USB Input (Off), MIDI Output Filter (Off), Knob Mode (Relative), Keyboard Priority (Last Note), Local Control (ON), Load Preset Volume (ON), Load Preset KB Octave (ON), Load Preset Mod Wheel (ON), 14 Bit CC Output (ON), Start with Active Panel (ON), and Pressure Scale (32). A Done button is located at the bottom right. The bottom of the window displays the firmware version (2.2.0), the version (2.0.0), and the website URL (www.moogmusic.com).

Editor Settings	Sub Phatty Global Settings
MIDI Input : Moog Sub Phatty	MIDI IN Channel : 1
MIDI Output : Moog Sub Phatty	MIDI OUT Channel : 1
Knob Behavior : Vertical	Midi Input : DIN & USB
Echo MIDI from Host : OFF	Midi Output : DIN & USB
MIDI Port Warning : ON	Merge DIN Input : Off
	Merge USB Input : Off
	MIDI Output Filter : Off
	Knob Mode : Relative
	Keyboard Priority : Last Note
	Local Control : ON
	Load Preset Volume : ON
	Load Preset KB Octave : ON
	Load Preset Mod Wheel : ON
	14 Bit CC Output : ON
	Start with Active Panel : ON
	Pressure Scale : 32

Firmware : 2.2.0
Version : 2.0.0

www.moogmusic.com

Done

EDITOR SETTINGS

MIDI INPUT: Selects the Editor's MIDI Input source.

MIDI OUTPUT: Selects the Editor's MIDI Output destination.

KNOB BEHAVIOR: Selects whether the editor knob control behavior is **VERTICAL** (linear movement up and down rotates a knob) or **KNOB** (rotary movement is required to rotate a knob).

MIDI PORT WARNING: If the Sub Phatty is not properly communicating with the Editor, this will warn you that the hardware is disconnected or unavailable.

Echo MIDI from Host: Merges MIDI from the host DAW and the Editor plugin and sends it to the Sub Phatty's specified MIDI input.

SUB PHATTY GLOBAL SETTINGS

MIDI IN CHANNEL: Selects the channel on which your Sub Phatty will receive MIDI information. (*CH 1-16*)

MIDI OUT CHANNEL: Selects the channel on which your Sub Phatty will send MIDI information. (*CH 1-16*)


KNOB MODE:

Selects how the Sub Phatty's physical knobs respond when turned.

SNAP: The value jumps to the knob's current position as soon as you begin turning it.

PASS THROUGH: Turning the knob has no effect until it reaches its preset value and then it takes effect.

RELATIVE: Turning the knob up or down slightly causes minor changes in value, while turning it further causes an increasingly greater change in value. This allows the value to "catch up" with the knob's position and prevents sudden jumps from a preset knob value to a physical knob value.
(Default is **RELATIVE**) *Page 36.*

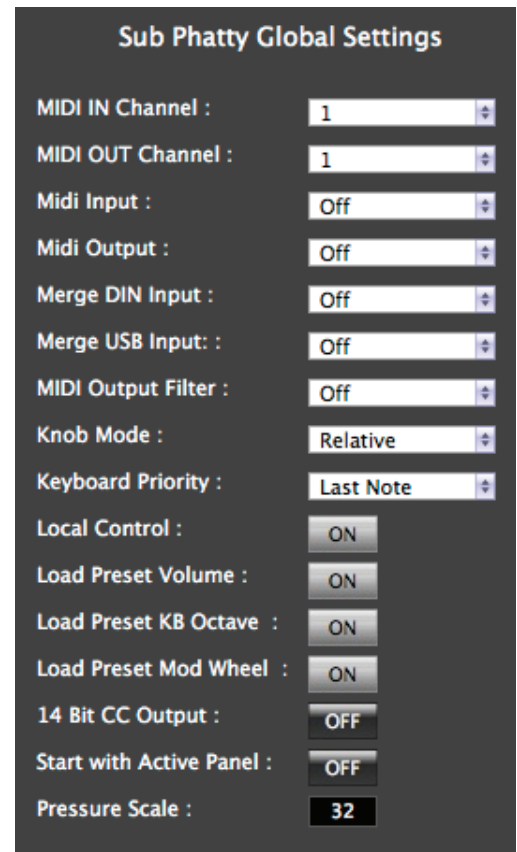

Sub Phatty Global Settings	
MIDI IN Channel :	1
MIDI OUT Channel :	1
Midi Input :	Off
Midi Output :	Off
Merge DIN Input :	Off
Merge USB Input :	Off
MIDI Output Filter :	Off
Knob Mode :	Relative
Keyboard Priority :	Last Note
Local Control :	ON
Load Preset Volume :	ON
Load Preset KB Octave :	ON
Load Preset Mod Wheel :	ON
14 Bit CC Output :	OFF
Start with Active Panel :	OFF
Pressure Scale :	32

KEYBOARD PRIORITY: Selects between **LOW NOTE**, **LAST NOTE**, or **HIGH NOTE PRIORITY**.
(Default is **LAST NOTE**) *Page 36*

LOAD PRESET VOLUME: Specifies whether an individual preset's loudness is controlled by the **MASTER VOLUME** knob's current setting or by the volume level that was saved within a preset.
Page 35

LOAD PRESET KB OCTAVE: Specifies whether to load a preset's Keyboard Octave settings or to retain the keyboard's current transposition. *Page 22 Global Controls.*

LOAD PRESET MOD WHEEL: Specifies whether to load a preset's modulation depth as controlled by the **MOD** wheel setting that was current when the preset was saved. *Page 35*

14 BIT CC OUTPUT: Most MIDI commands allow a range of values from 0 to 127, a number limited by 7-bit words that make up standard MIDI messages. For Control Change (CC) commands that require greater resolution, it's possible to use 14-bit words that allow a much finer-resolution range of values, from 0 to 16,384. *Page 34*

MIDI INPUT: Selects the Sub Phatty's MIDI input port from USB, DIN MIDI, or BOTH. (Default is BOTH) *Page 33*

MIDI OUTPUT: Selects the Sub Phatty's MIDI output port to USB, DIN MIDI, or BOTH.
(Default is BOTH) *Page 33*

MIDI MERGE: The Sub Phatty can merge the MIDI data it receives with the MIDI data it transmits. You can specify the path of the merged data so that data received at either the **MIDI IN** jack or the USB port is passed through to the **MIDI OUT** jack or the USB port.

MERGE DIN INPUT:

OFF: Turns MIDI merging off.

DIN MIDI IN to DIN MIDI OUT: Data received by the MIDI IN jack passes through to the **MIDI OUT** jack only.

DIN MIDI IN to USB OUT: Data received by the **MIDI IN** jack passes through to the **USB** port only.

DIN MIDI IN to USB AND DIN MIDI OUT: Data received by the **MIDI IN** jack passes through to both the **MIDI OUT** jack and the **USB** port. *Page 34*

MERGE USB INPUT:

OFF: Turns MIDI merging off.

USB IN to DIN MIDI OUT: Data received by the **USB** port passes through to the **MIDI OUT** jack only.

USB IN to USB port OUT: Data received by the **USB** port jack passes through to the **USB** port only.

USB IN to USB AND MIDI DIN OUT: Data received by the **USB** port passes through to both the **MIDI OUT** jack and the **USB** port. *Page 33*

MIDI OUTPUT FILTER:

Filters data that the Sub Phatty sends out so that certain data isn't received by external MIDI devices. *Page 35*

OFF: Sends all data. (Default is **OFF**)

CC7/ VOL: Sends everything except volume data.

PANEL KNOBS: Only sends data from the keyboard, Mod Wheel, and Pitch Wheel.

KEYS ONLY: Sends note data only.

START WITH ACTIVE PANEL:

Upon turning on the Sub Phatty, the front panel settings determine the sound rather than loading a preset. Dialing up sounds in Active Panel mode is exactly like dialing up sounds in a classic synth without patch memory, but when you're finished sculpting your sound, you can save your work. Saving a preset stores all the settings that define your new sound. (Default is **OFF**) *Page 10*

MIDI OPERATION AND CHARTS

See pages 38-41 for clock divisions and CC value information.

SUPPORT:

<http://www.moogmusic.com/support>